



## OPERATING THE CONTROLS

- ① **Dial** - Rotate to scroll through menus; press to select
- ② **Back** - Returns to the previous screen
- ③ **Home** - Instantly returns to the Home (Activity) screen
- ④ **Soft Keys** - Function labels appear on each screen
- ⑤ **Main Menu** - From Home, press this soft key to access all programming menus
- ⑥ **SD Card Reader** - Stores logs, backups, and updates modules (located on reverse side of facepack)

**Note:** MCC is only compatible with "Enhanced" output modules ICM-800, ICM-2200, and EZ-DM date coded late 2025. See Support page for exact date codes.



hunter.help/MCC

PROGRAMS	STATIONS	DEVICES	FLOW	SETTINGS	DIAGNOSTICS	ADVANCED FEATURES	DECODERS
Start Times	Station Setup	P/MV Operation	Flow Operations	Time/Date	View Logs	Export Logs	Program Decoder
Run Times	Cycle & Soak	Flow Sensors	Flow Zones	Regional Settings	Module Info	Easy Retrieve®	Decoder Diagnostics
Water Days	Blocks	Solar Sync®	Flow Totals	User Management	Clik Sensor Diagnostics	Reset Memory	
Seasonal Adjust	Station Limits	Clik Sensors	Learn Flow	Networking	Station-P/MV Diagnostics	Firmware Update	
Program Rules	Station Summary	Selectable Sensor	Clear Flow Alarms	Controller Verification	Flow Sensor Diagnostics	Conditional Response	
Calendar Days Off		Sensor Response	Hydraulic Summary		Solar Sync Diagnostics		
Program Summary					Decoder Diagnostics		
					WVL Diagnostics		

## SETTING TIME AND DATE

1. Dial to **Settings** menu and select **Time/Date**.
2. (Select Regional Settings to customize time and date formats.)
3. Select current time, then rotate dial to set.
4. Select current date, then rotate dial to set.

## PROGRAMMING

From Home, press **Main Menu**, and dial to **Programs** menu.

### Start times

1. Select **Start Times** from Programs menu.
2. Select Program number — up to 16 programs are possible.
3. Programs may be named by selecting Name box.
4. Set Mode to **Auto** for automatic operation.
5. Check **Overlap** to allow the program to run at the same time as other programs.
6. Select **Start to End** for continuous operation during a time period. Select **Manual Only** for programs that only start on command.
7. Check **Stack** if the program must run by itself.
8. Select **Start Time** boxes, and rotate dial to set Start Time.

### Run Times

1. Select **Run Times** from Programs menu or shortcut key.
2. Verify or select program number.
3. Run Type may be Station or Block (dial to select). **Blocks** are groups of stations that run together. See manual.
4. Select and set Station (or Block) number.
5. Stations or Blocks will run in the order they are entered.
6. Select and set Run Time in HH:MM (hours/minutes). Select :SS seconds, if desired.
7. Show Edit Tools (soft key) for shortcuts.

**Fill Down** (soft key) will add one number to previous station on next line, and copy run times to it.

**Adjusted Run Time** shows effects of Seasonal Adjust, if other than 100%.

### Water Days

1. Select **Water Days** from Programs menu or shortcut key.
2. Verify or select Program number.
3. Mode: Select Day of Week, Odd/Even dates, Interval, or Manual Only. Manual Only will not run automatically.
4. Check the Days of the Week to water, check Odd or Even, or set Interval period. If using Interval, specify interval start date. (The system won't water on non-water days — even if a schedule is set for that day.)

### SET PUMP/MASTER VALVE OPERATION

1. Turn dial to Devices menu, and select P/MV operation.
2. Verify or select P/MV number.
3. Set **Normally Closed** or **Normally Open** operation.
4. Exit screen using **Back** button, then dial to **Stations** menu.
5. Select **Station Setup**.
6. Check boxes for the **P/MV assignments** for each station.

### MANUAL OPERATIONS

1. From Home screen, press **Manual** soft key.
2. Use soft keys to select Stations, Program, or Test Program.

**Stations:** Check Sequential or Simultaneous.

3. Enter Stations or Blocks. Enter Run Times for each.
4. Press soft key for Start to run the items immediately.

**Programs:** Select Program number.

5. Press **Start** soft key to start immediately.
6. To select a different station, dial to it and press Start.

**Test Program:** Test will run all stations in the controller for the run time entered.

**Stop a running station:** Select any item in the Activity screen when irrigation is running. Press soft key for Stop Station to halt the selected station only.

### SENSOR BYPASS

Active sensors do not interfere with manual irrigation. If sensor is active and preventing desired automatic irrigation, the sensor can be bypassed for up to 24 hours. If the Sensor Active display appears, one of the soft keys will show a Bypass shortcut. Bypass will only remain active for 24 hours. If a longer bypass is needed, disable the sensor on the Devices menu.

### MESSAGES & ALARMS

The flashing  icon signals a system issue.

Press **View Messages** to read the notifications.

Press **View Logs** for a detailed view of all alarms and messages, beginning with the most recent. Use the dial to review recent activity.

Press **Clear Messages** to return to the Home/Activity screen.

Messages do not interrupt automatic irrigation, but they may announce a condition that does.

### VIEW FLOW

When flow sensors are installed and configured, **View Flow** will show current flow rate of all sensors.

Clear Messages to show the View Flow key again.

More detailed information is available on the Flow menu. Select **Flow Totals**.

Consult online product manual for **Flow Operations** and **Advanced Features**.

All station and program information can be saved to the SD Card with the Easy Retrieve function (Advanced Features).

STATION/NAME	PROGRAMS	RUN TIME
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		
26		
27		
28		
29		
30		
31		
32		
33		
34		
35		
36		
37		
38		
39		
40		
41		
42		
43		
44		
45		
46		
47		
48		
49		
50		
51		
52		
53		
54		

PROGRAM/NAME	START TIMES	WATER DAYS
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		