

WARRANTY DATE CODE

REFERENCE GUIDE

Hunter®



STATEMENT OF WARRANTY Hunter Irrigation

Hunter Industries Incorporated ("Hunter") warrants the following products to be free of defects in materials or workmanship under normal use in landscape irrigation applications for the specified period of time outlined below from the original date of manufacture:

ONE YEAR	ROTORS	SRM	MICRO	Micro Sprays, PLD Fittings, Rigid Risers, Air/Vacuum Relief Valves
	ROTORS	PGP-ADJ, PGJ	CONTROLLERS	ACC (Legacy), BTT, FS-1000, FS-3000, I-Core/DUAL (Legacy), NODE, NODE-BT, Pro-C, PSR, ROAM, XC Hybrid, X-Core, WV, WVOM, RPT, Hydrowise Controllers (HC, X2, WAND, PHC, HPC, HCC)
TWO YEARS	SPRAYS	PS Ultra, SJ, FlexSG, HSB, MP Rotator Stake Kit	SENSORS	HC Flow Meter (wired and wireless)
	NOZZLES	Spray Nozzles, PCN, PCB, AFB, MSBN	MICRO	ACZ, PCZ, RZWS, Point-Source Emitters, Tubing, Multi-Port Emitters, IH Risers, MLD, Eco-Indicator***, Multi-Purpose Box, Senninger Regulators, PLD-LOC Fittings
	VALVES	PGV, HCV	TOOLS	SpotShot
	CENTRAL****	All central communication modules (cell, LAN, Wi-Fi, and automation field servers), Hunter 360 Software, Weather Stations		
THREE YEARS	MP ROTATOR	All Nozzles	CONTROLLERS	ROAM XL, EZ Decoder System, EZ-DT
	ROTORS	PGP Ultra, I-20, I-25, I-40, I-80, I-90, ST-1600, ST-1700-V	CONTROLLERS	ACC2, ICC2, ICD Decoders, ICD-HP Programmer
FIVE YEARS	SPRAYS	Pro-Spray, Pro-Spray PRS30, Pro-Spray PRS40	SENSORS	Clik Sensors, Flow-Sync, MWS, Solar Sync, Wireless Flow Sensor
	VALVES	ICV, IBV, HQ, Accu Sync	MICRO	ICZ, IBZ, HDL**, HDL-COP**, Eco-Mat, Eco-Wrap, Eco-Indicator***

** Plus 2 additional years for environmental stress cracking. No warranty against root intrusion on HDL-COP. While the use of copper does not completely remove the chance of root intrusion, it has been shown to assist in its prevention when coupled with proper irrigation scheduling.

*** Eco-Indicator – 6" ECO-ID: 2-year warranty; 12" ECO-ID-12: 5-year warranty

**** Hunter’s cellular module warranty does not apply to the availability or compatibility of cellular data service in any particular area. Availability of compatible data services should be determined prior to purchase.



hunter.info/warranty



All products currently under warranty are included in this guide. If you don’t see the product you’re looking for, it may no longer be under warranty. Learn more at hunter.info/discontinued.

ROTORS



Nozzle

PGP-ADJ Rotors

Date code is located on the nozzle housing.
(yr/mo)

Warranty period: 2 years

 


Nozzle

PGP® Ultra, I-20 Rotors

Date code is located on the nozzle housing.
(yr/mo)

Warranty period: 5 years

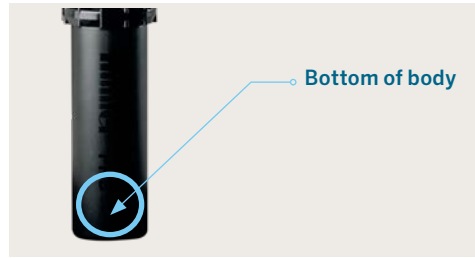


Bottom of body

PGP-04-PRB, I-20-PRB, PR-075 Rotors

Date code is located on the bottom of the body.
(yr/mo)

 Warranty period: 5 years

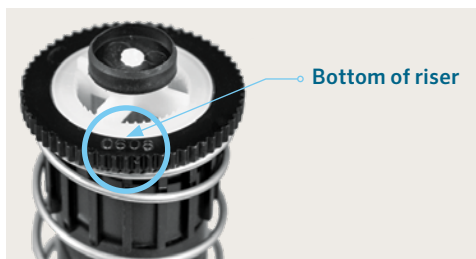


Bottom of riser

PGJ Rotors

Date code is located on the bottom of the riser,
removed from the body.
(yr/mo)

 Warranty period: 2 years

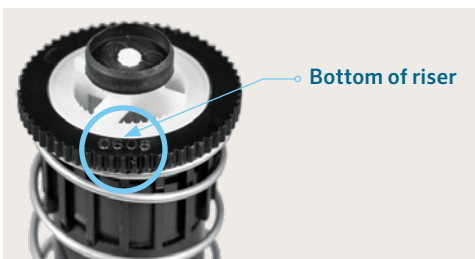


Bottom of riser

SRM Rotors

Date code is located on the bottom of the riser,
removed from the body.
(yr/mo)

 Warranty period: 1 year

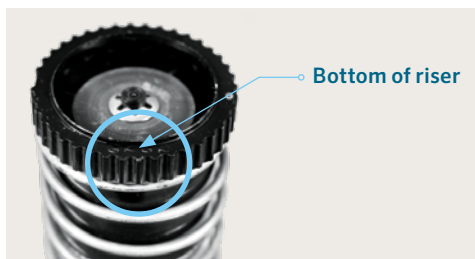


Bottom of riser

I-20-SS, I-25, I-40 Rotors

Date code is located on the bottom of the riser,
removed from the body.
(yr/mo)

 Warranty period: 5 years

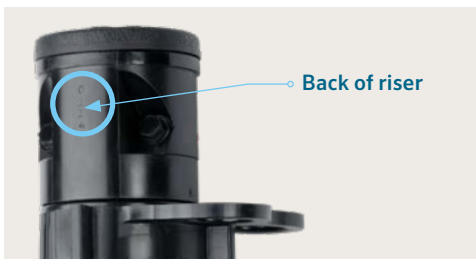


Back of riser

I-80 Rotors

Date code is located on the back of the riser,
removed from the body.
(mo/yr)

 Warranty period: 5 years

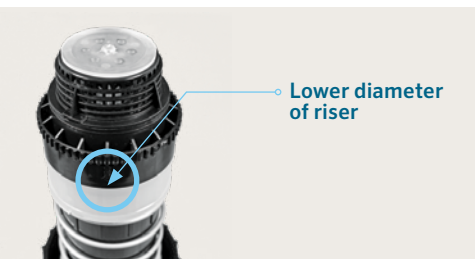


Lower diameter
of riser

I-90 Rotors

Date code is located on the lower diameter of the riser.
(mo/yr)

 Warranty period: 5 years

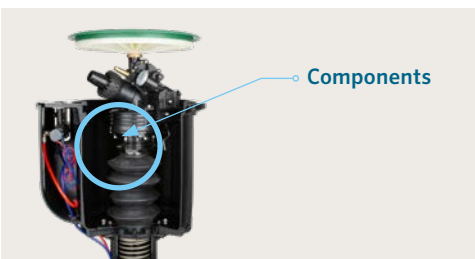


Components

ST-1600/ST-1700-V Rotors

Date code is located on the components.
(yr/mo)

Warranty period: 5 years (component only)

 MP ROTATOR® NOZZLES & SPRINKLER BODIES

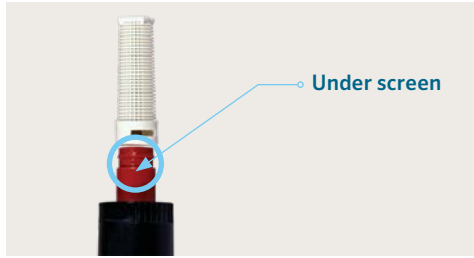

MP Rotator Nozzles

Date code is located under the screen.
(mo/dy/yr)

 
Warranty period: 3 years



Pro-Spray® Sprinkler Bodies

Date code is located on the body cap.
(q/yr)


Warranty period: 5 years

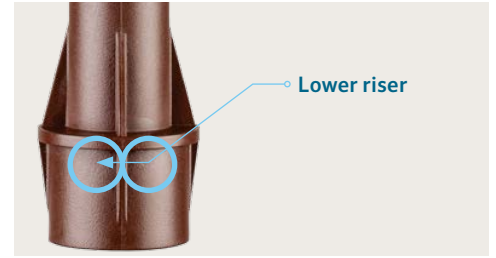

Pro-Spray PROS-00 Sprinkler Bodies

Date code is located on the lower diameter of the riser.
(q/yr)

 
Warranty period: 5 years

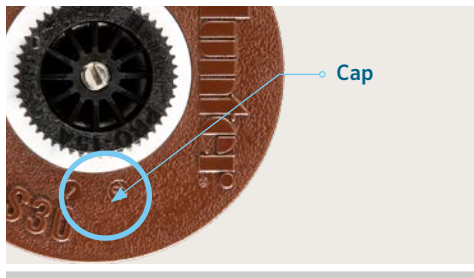

Pro-Spray PRS30 Sprinkler Bodies

Date code is located on the body cap.
(mo/yr)

 
Warranty period: 5 years

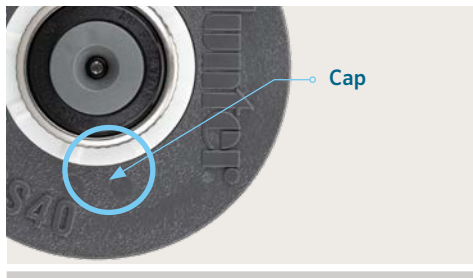

Pro-Spray PRS40 Sprinkler Bodies

Date code is located on the body cap.
(mo/yr)

 Warranty period: 5 years

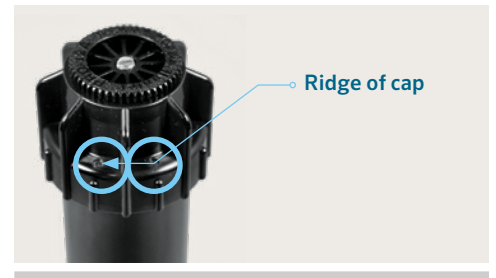

PS Ultra Sprinkler Bodies

Date code is located in the ridges of the cap.
(q/yr)

Warranty period: 2 years

 
VALVES



1" PGV Valves

Date code is located on the top of the bonnet.
(mo/yr)


Warranty period: 2 years

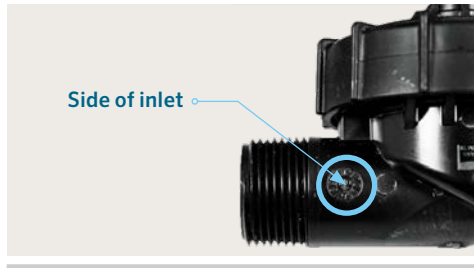

PGV-JT Valves

Date code is located on the side of the inlet.
(mo/yr)

 
Warranty period: 2 years

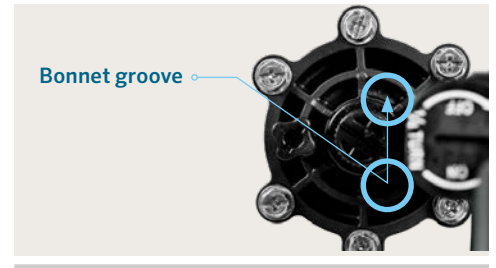

PGV-ASV Valves

Date code located in the bonnet groove.
(mo/yr)

 Warranty period: 2 years

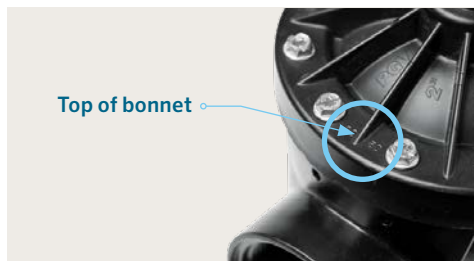

1½", 2" PGV Valves

Date code is located on the top of the bonnet.
(mo/yr)

 
Warranty period: 2 years



IBV Valves

Date code is located on the top of the bonnet.
(mo/yr)

Warranty period: 5 years

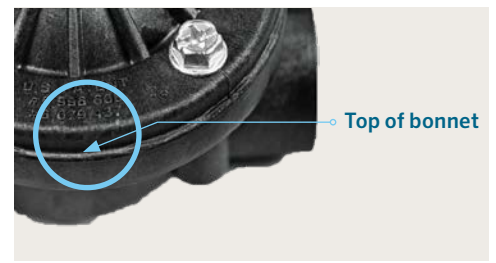


ICV Valves

Date code is located on the top of the bonnet.
(mo/yr)

Warranty period: 5 years

 VALVES & ACCESSORIES

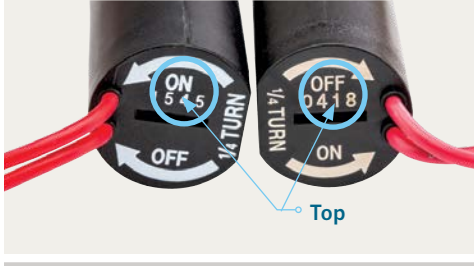

Solenoids

Date code is located on the top, below **ON** (yr/wk) and **OFF** (mo/yr).

Warranty period: 5 years

 


Accu Sync® Pressure Regulators

Date code is located on the lower diameter near the thread end.

(mo/yr)


Warranty period: 5 years

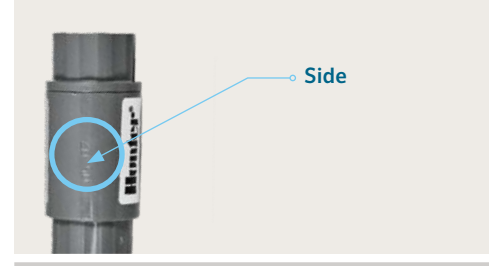

HCV Check Valves

Date code is located on the side.
(mo/yr)

 Warranty period: 2 years

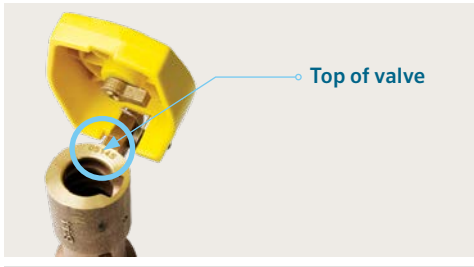

Quick Couplers

Date code is located on the top of the valve.
(mo/yr)

Warranty period: 5 years

CONTROLLERS



A2M-600 Output Modules

Date code is located on the bottom or back side.
(mo/yr)

 
Warranty period: 5 years



ACC2 Communication Modules

Date code is located on the back side.
(yr/mo/dy)

Warranty period: 2 years

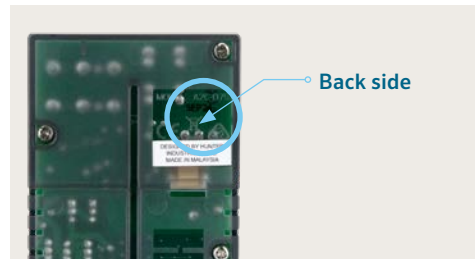

A2C-D75 Decoder Output Modules (for ACC2 Controller)

Date code is located on the back side of the module.
(mo/yr)

Warranty period: 5 years



ACC2 Controller Compartments

Date code is located on the right wall of the wiring compartment.
(mo/yr)

Warranty period: 5 years



ACC2 Controller Facepacks

Date code is located on the back side.
(mo/yr)

Warranty period: 5 years



ACC Controller Compartments

Date code is located in the back of the wire compartment.
(mo/yr)

 
Warranty period: 2 years



ADM-99 Output Modules (for legacy ACC Decoder)

Date code is located on the top of the connection plate.
(mo/yr)

Warranty period: 2 years

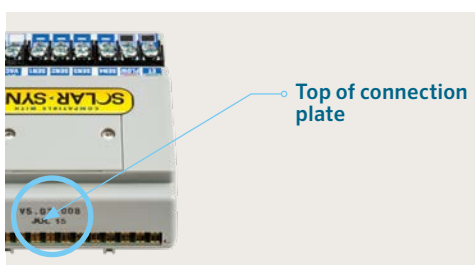

ACC Controller Master Modules

Date code is located on the top of the connection plate.
(mo/yr)

Warranty period: 2 years

 


ACC Controller Communication Modules

Date code is located on the back side.
(mo/yr)

Warranty period: 2 years

CONTROLLERS

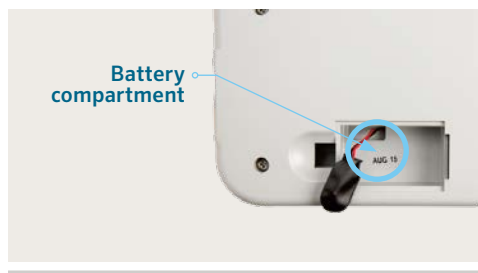

ACC Controller Facepacks

Date code is located in the battery compartment.
(mo/yr)

Warranty period: 2 years



RAD-3 UHF Radios

Date code is located on the back side.
(mo/yr)

 
Warranty period: 2 years



PC-DM Decoder Output Modules

Date code is located on the bottom or back side.
(mo/yr)


Warranty period: 2 years

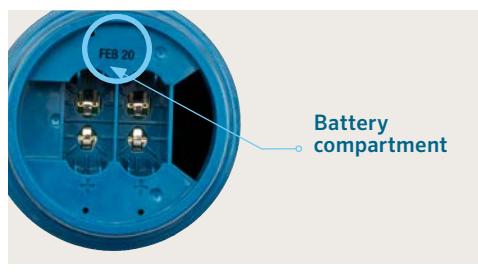

NODE-BT Controllers

Date code is located in the battery compartment.
(mo/yr)

 
Warranty period: 2 years

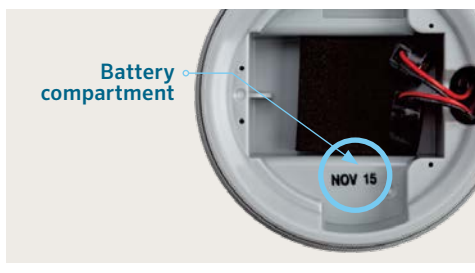

NODE Battery-Operated Controllers

Date code is located in the battery compartment.
(mo/yr)

 Warranty period: 2 years

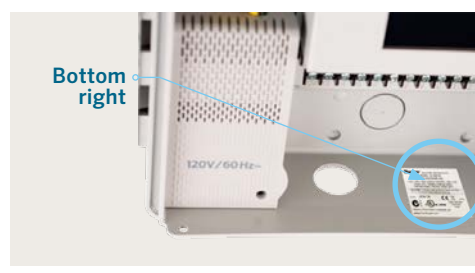

Pro-HC Controllers

Date code is located on the bottom right wall of the wiring compartment.
(mo/yr)

Warranty period: 2 years



Pro-C, PCC Controller Facepacks

Date code is located on the back side.
(mo/yr)

 
Warranty period: 2 years



Pro-C, PCC, HPC Compartments

Date code is located in the top right wire compartment.
(mo/yr)

Warranty period: 2 years

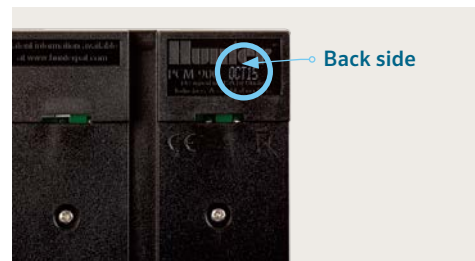

PCM Output Modules

Date code is located on the bottom or back side.
(mo/yr)

Warranty period: 2 years

CONTROLLERS



BTT Bluetooth® Tap Timers

Date code is located on the back side.
(mo/yr)

 
Warranty period: 2 years



DUAL® 48M Decoder Output Modules

Date code is located on the back side.
(mo/yr)

Warranty period: 2 years

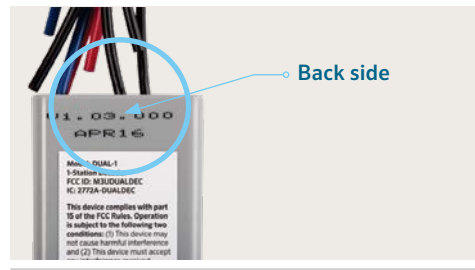

DUAL Decoders

Date code is located on the back side or on the bottom.
(mo/yr)

Warranty period: 2 years



EZ-1 Decoders

Date code is located on the bottom.
(mo/yr)

Warranty period: 3 years



EZ-DM Decoder Output Modules

Date code is located on the back side.
(mo/yr)

Warranty period: 3 years



HC Controllers

Date code is located on the back side.
(mo/yr)

Warranty period: 2 years



HCC Controller Facepacks

Date code is located on the back side.
(mo/yr)

Warranty period: 2 years



HCC Controller Power Modules

Date code is located on the back side.
(mo/yr)

Warranty period: 2 years

 


HPC (Pro-C® Hydrawise) Facepacks

Date code is located on the back side.
(mo/yr)

Warranty period: 2 years

CONTROLLERS

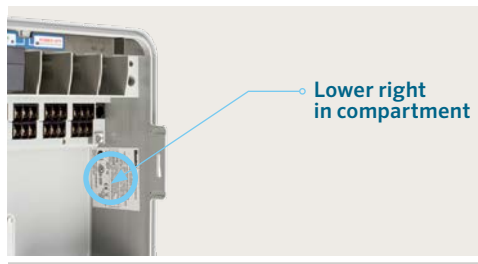


Lower right
in compartment

I-Core® Controller Compartments

Compartment date code is located in the lower right wire compartment.

(mo/yr)

 Warranty period: 2 years

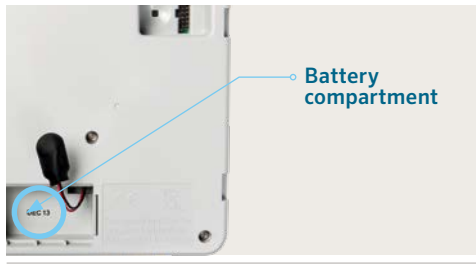

Battery
compartment

I-Core Controller Facepacks

Facepack date code is located in the battery compartment.

(mo/yr)

Warranty period: 2 years



Back side

I-Core Controller Modules

Date code is located on the bottom or back side.

(mo/yr)

Warranty period: 2 years



 
Back right of
compartment

ICC2 Controller Compartments

Date code is located on the back right wall of the wiring compartment.

(mo/yr)

Warranty period: 5 years

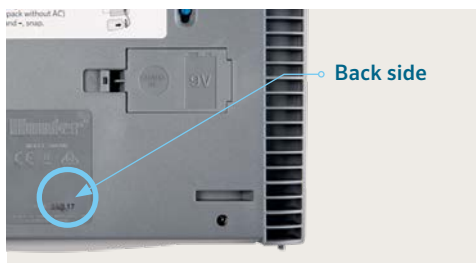


Back side

ICC2 Controller Facepacks

Date code is located on the lower back side.

(mo/yr)

 Warranty period: 5 years

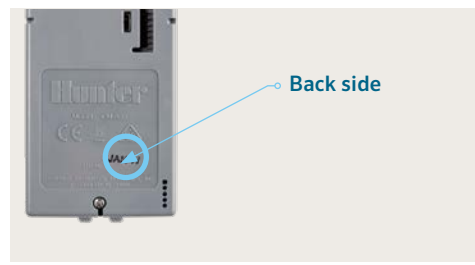


Back side

ICC2 Controller Modules

Date code is located on the bottom or back side.

(mo/yr)

 Warranty period: 5 years

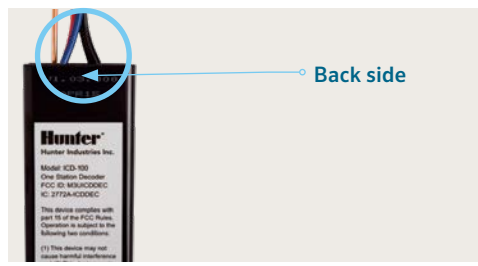

Back side

ICD Decoders

Date code is located on the back side, above the approvals label, or on the bottom.

(mo/yr)

Warranty period: 5 years



Back side

ICD-HP Programmers

Date code is located on the back side.

(mo/yr)

Warranty period: 5 years



Back side

 
ROAM Receivers

Date code is located on the back side.

(mo/yr)

Warranty period: 2 years


CONTROLLERS

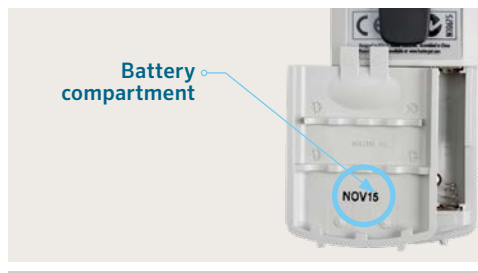

ROAM Transmitters

Date code is located in the battery compartment cover.
(mo/yr)

 
Warranty period: 2 years

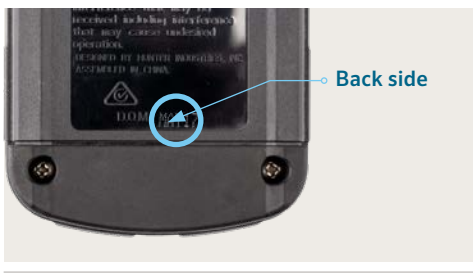

ROAM XL Receivers

Date code is located on the back side.
(mo/yr)

 
Warranty period: 3 years

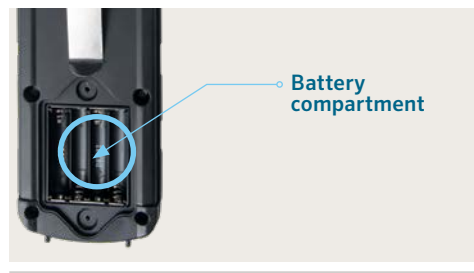

ROAM XL Transmitters

Date code is located in the battery compartment.
(mo/yr)

 Warranty period: 3 years

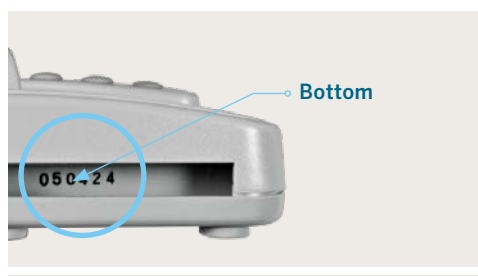

X-Core® Indoor Controllers

Date code is located on the bottom of the controller.
(mo/yr)

Warranty period: 2 years



X-Core, XC Hybrid Controllers

Date code is located in the lower right area of the wiring compartment.
(mo/yr)

Warranty period: 2 years



Pump Start Relays (PSR)

Date code is located on the inside cover.
(mo/yr)

Warranty period: 2 years



X2™ Controllers

Date code is located under the wiring terminal strip.
(mo/yr)

Warranty period: 2 years



WAND Modules

Date code is located on the back side of the module.
(mo/yr)

Warranty period: 2 years



Wireless Valve Output Modules

Date code is located on the back side of the module.
(mo/yr)

Warranty period: 2 years

CONTROLLERS

 


Wireless Valve Links

Date code is located on the compliance label above the battery compartment.

(mo/yr)

Warranty period: 2 years

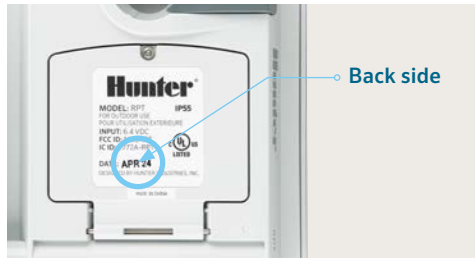

Wireless Solar Repeaters (RPT)

Date code is located on the sticker on the battery compartment.

(mo/yr)

Warranty period: 2 years



PC-WIFI™ Modules

Date code is located on the bottom edge of the module near the gray ribbon cable.

(mo/yr)

Warranty period: 2 years

 
SENSORS



Wired Solar Sync® Sensors

Date code is located on the bottom of the sensor.
(mo/yr)

Warranty period: 5 years

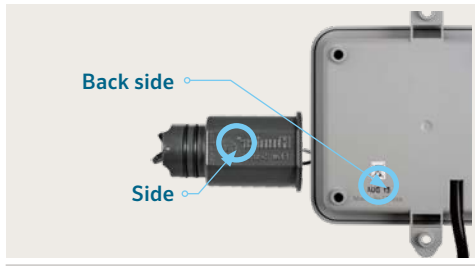


Flow-Clik®, Flow-Sync® Sensors

Receiver date code is located on the back side.
Sensor date code is located on the side.

(mo/yr)

 
Warranty period: 5 years

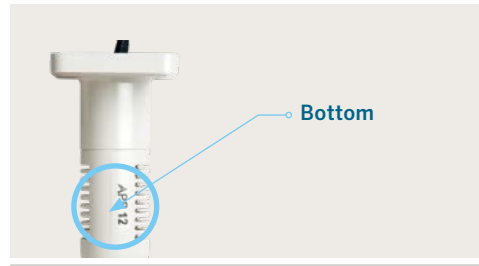

Freeze-Clik® Sensors

Date code is located on the bottom of the sensor.
(mo/yr)

 Warranty period: 5 years

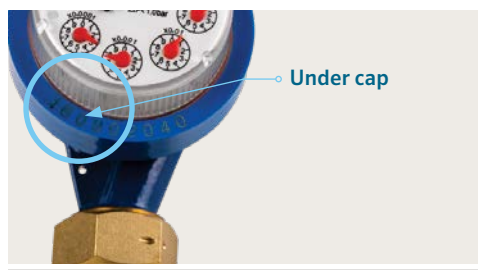


HC Flow Meters

Date code is located under the cap and around the meter lens.

(yr/mo)

 Warranty period: 2 years

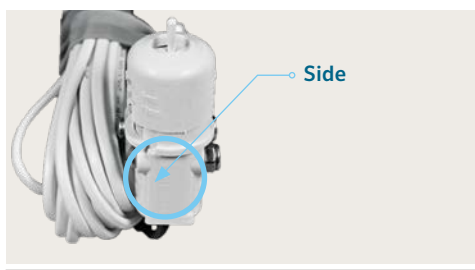


Mini-Clik® Sensors

Date code is located on the side.

(mo/yr)

 Warranty period: 5 years

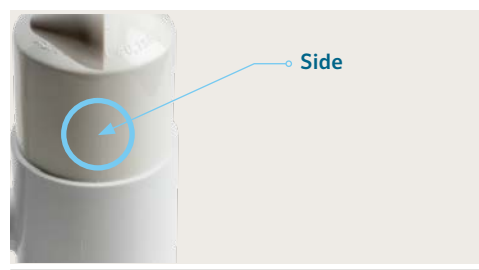


Mini Weather Stations (MWS)

Date code is located on the side.

(mo/yr)

 Warranty period: 5 years

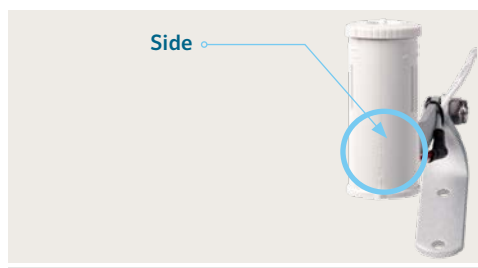


Wired Rain-Clik® Sensors

Date code is located on the side.

(mo/yr)

 Warranty period: 5 years

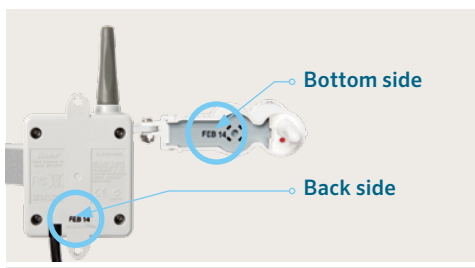

Wireless Rain-Clik Sensors

 
Receiver date code is located on the back side.

Sensor date code is located on the bottom.

(mo/yr)

Warranty period: 5 years

SENSORS & MICRO IRRIGATION

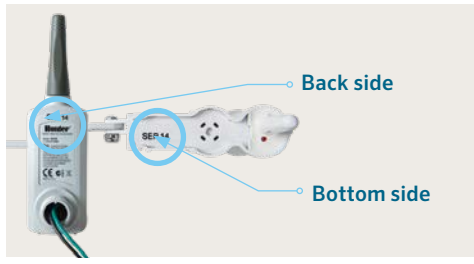


Wireless Solar Sync Sensors

Receiver date code is located on the back side.

Sensor date code is located on the bottom.

(mo/yr)

 Warranty period: 5 years

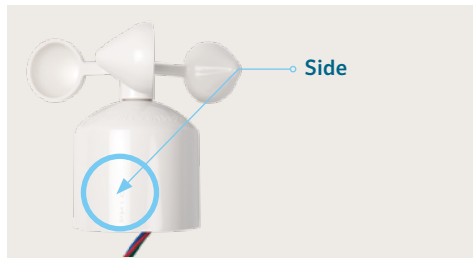

Wind-Click® Sensors

Date code is located on the side.

(mo/yr)

Warranty period: 5 years



 
Wireless Flow Sensors

Receiver date code is located on the bottom.

Sensor date code is located on the side.

(mo/yr)

Warranty period: 5 years

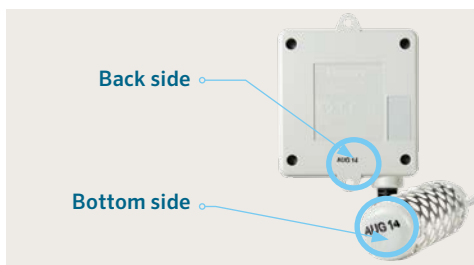


Soil-Click® Sensors

Receiver date code is located on the back side.

Sensor date code is located on the bottom.

(mo/yr)

 Warranty period: 5 years

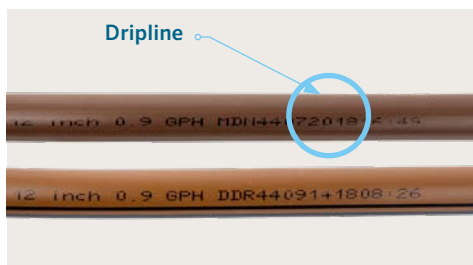

Hunter Dripline (HDL), HDL-COP

Date code is located on the length of dripline.

(mo/yr)

Warranty period: 5 years



Filter Regulators (HFR)

Date code is located on the side.

(yr/mo/day)

Warranty period: 2 years

HUNTER CUSTOMER SUPPORT

At Hunter, we've always believed the difference lies in providing world-class product support to make your job easier. When you need technical help, whether it's to ask a quick question or to get product-specific troubleshooting assistance, you can count on Hunter to provide the best support in the industry. Our knowledgeable experts are always available to help you.

Online Product Support

Visit our Support Library for instructional videos, owner's manuals, installation details, articles, and more.



Learn more at hunterirrigation.com/support.

Customer Service

Our dedicated Customer Service representatives are available for assistance with product orders, order status, RMAs, and more. Call us today at **1-800-383-4747**.

Hunter University

The comprehensive online training programs available through Hunter University are designed to help you and your customers become familiar with Hunter products — for free! Many courses are also available in Spanish.



Learn more at training.hunterirrigation.com.

Hunter Preferred Program

Your customers can earn points for purchasing Hunter and FX Luminaire products that can be redeemed for prizes, trips, credit, and more. Contractors and public agencies can enroll online at preferred.hunterindustries.com.



Questions about the program?

Phone: 1-877-888-0167

Email: hunter.preferred@hunter.global



Helping our customers succeed is what drives us. While our passion for innovation and engineering is built into everything we do, it is our commitment to exceptional support that we hope will keep you in the Hunter family of customers for years to come.

A white, stylized handwritten signature of Gregory R. Hunter.

Gregory R. Hunter, CEO of Hunter Industries

A white, stylized handwritten signature of Denise Mullikin.

Denise Mullikin, President, Landscape Irrigation and Outdoor Lighting